

BHPR - Shut-off mechanism assembly guide

herzog®

This guide shows the assembly steps of the shut-off mechanism.
Refer to the BHP nozzle installation guide for nozzle - machine installation instructions.

Legend



Tool



Lubricate all threads with high temperature grease




Manually



Attention

OBSOLETE


1

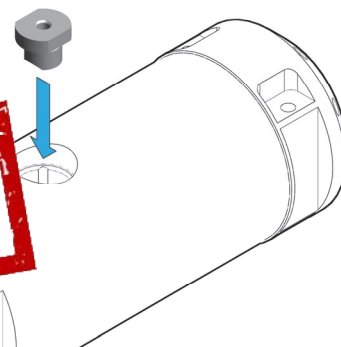


2




SW24 / 340Nm

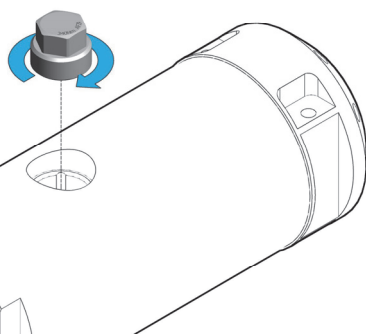

3

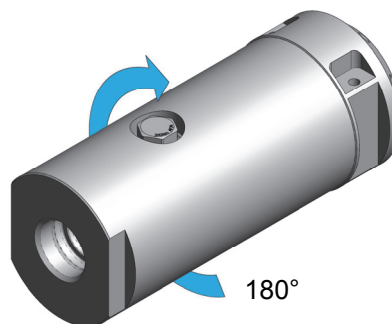


4

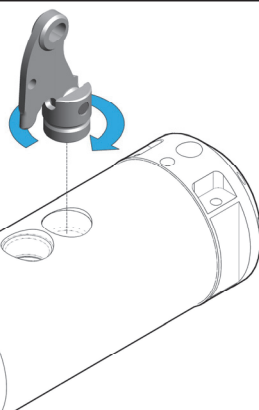


5

Align slot

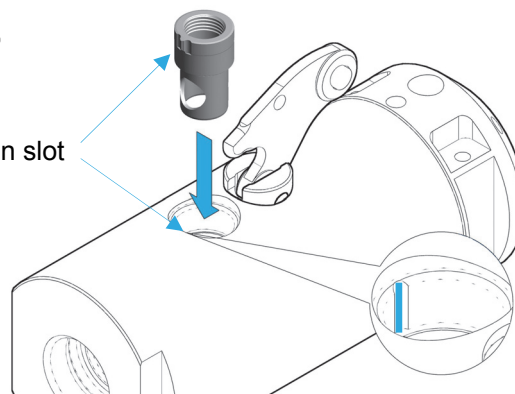

6


Align slot

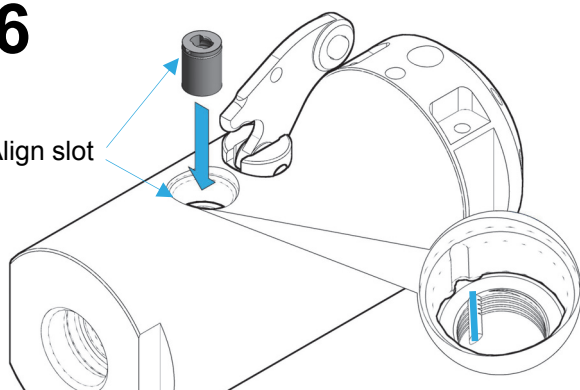

7




SW19 / 340Nm

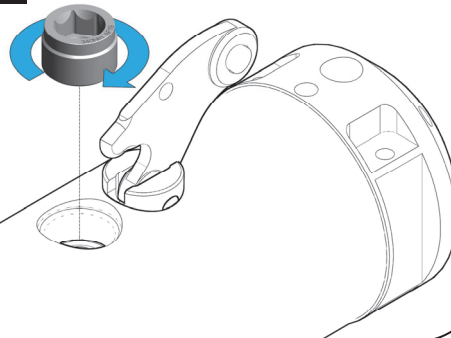


8



End position

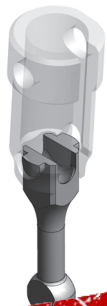


9

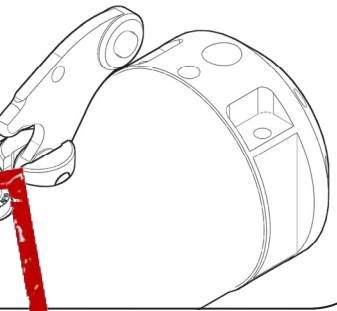


OBSOLETE

10


Turn rod 90°

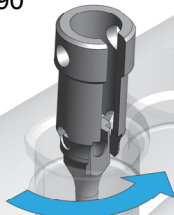

11

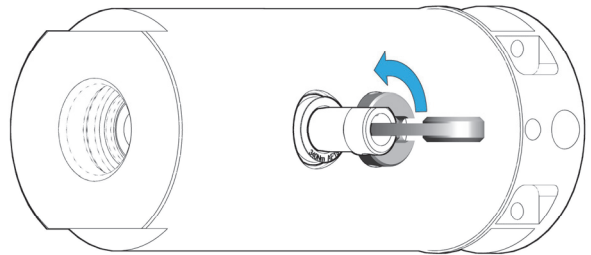Align lever unit anti-clockwise


12

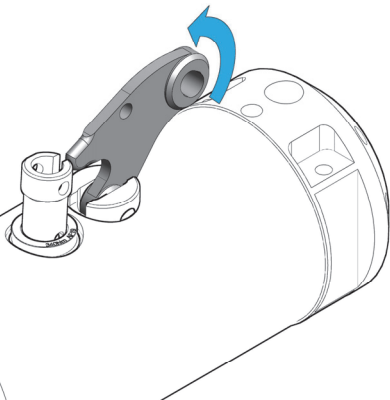

13





SW10 / 10Nm

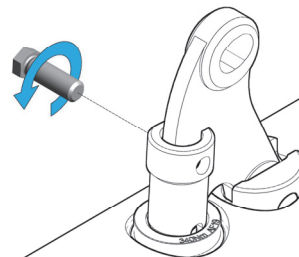

14



Visual inspection: Push lever until contact = bolt closed position.

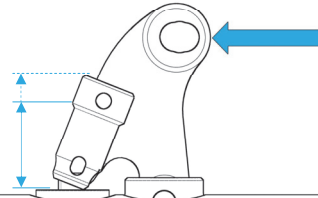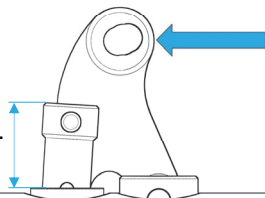Approx.
35mm

Switzerland
herzog systems ag
 Feldhofstrasse 65
 CH-9230 Flawil

Tel. +41 71 394 19 69
 Email info@herzog-ag.com

China
Herzog (China) Co., Ltd.
 No.438 Zhujiang Road
 Ningbo, PC: 315800

Tel. +86 574 8696 3001
 Email asia@herzog-ag.com

USA
Herzog Injection Technology, Inc.
 245 Western Ave
 Essex, MA 01929

Tel. +1 978 768 0090
 Email usa@herzog-ag.com